

# Morfin Auth Client Service Installation Manual

7<sup>th</sup> March 2023

Mantra Softech India Pvt . Ltd.


**TABLE OF CONTENTS**

|                                                         |    |
|---------------------------------------------------------|----|
| 1. Start Installation.....                              | 3  |
| 2. Welcome Wizard.....                                  | 3  |
| 3. Destination Location.....                            | 4  |
| 4. Finish MIDFingerAuth ClientService Installation..... | 4  |
| 5. Service Status.....                                  | 5  |
| 6. Opening Certificate Installation Page.....           | 6  |
| 6.1 Chrome.....                                         | 6  |
| 6.2 Firefox.....                                        | 7  |
| 6.3 Internet Explorer.....                              | 8  |
| 7. Final Screen For Capture Finger.....                 | 13 |


## 1.Start Installation

Right click on setup file and select “Run as administrator”


**Note :** To install MorFin ClientService & Setup need to access system32 folder. In this case setup needs administrator privileges.

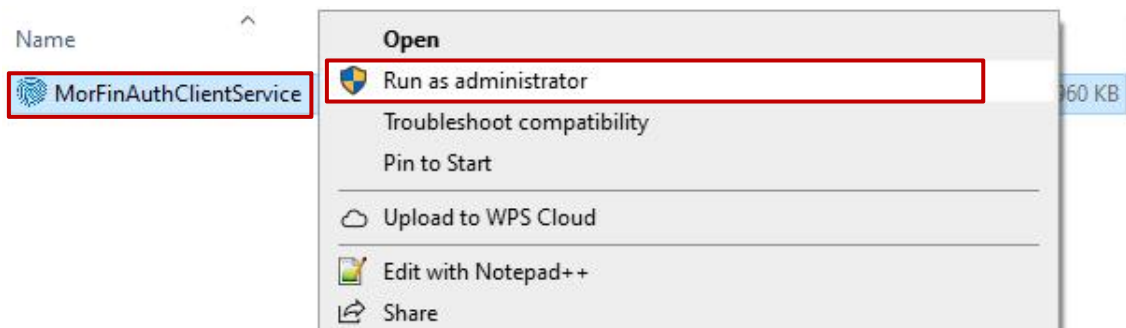


## 2.Welcome Wizard

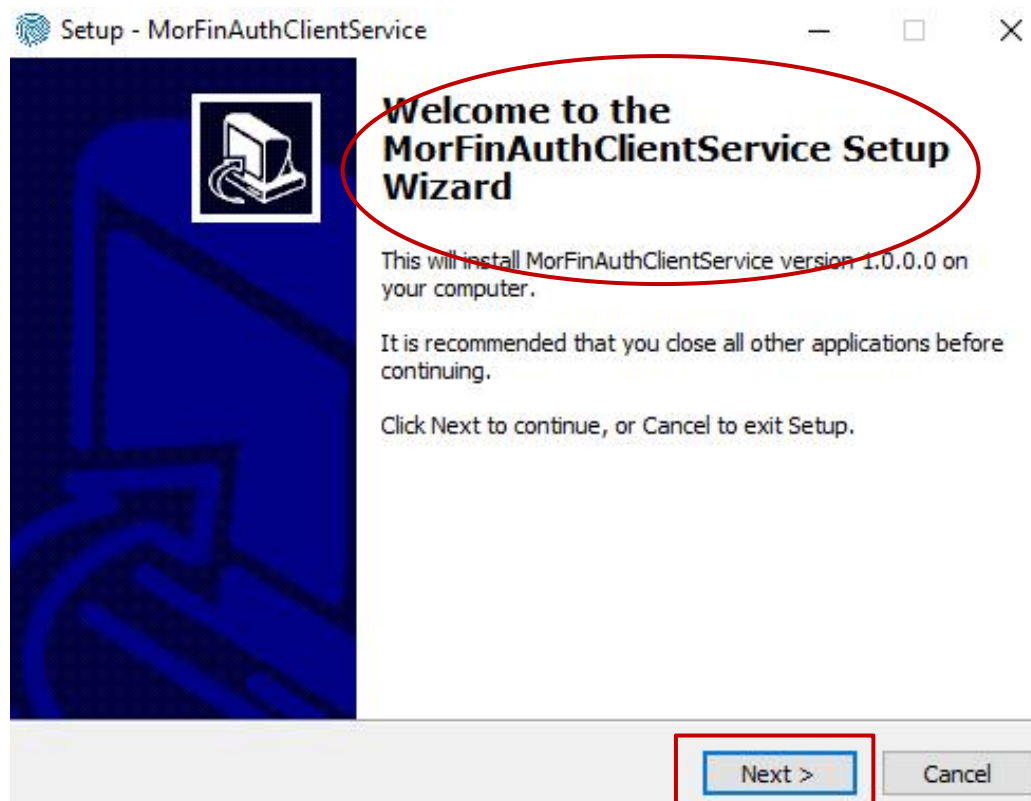

3. Destination Location

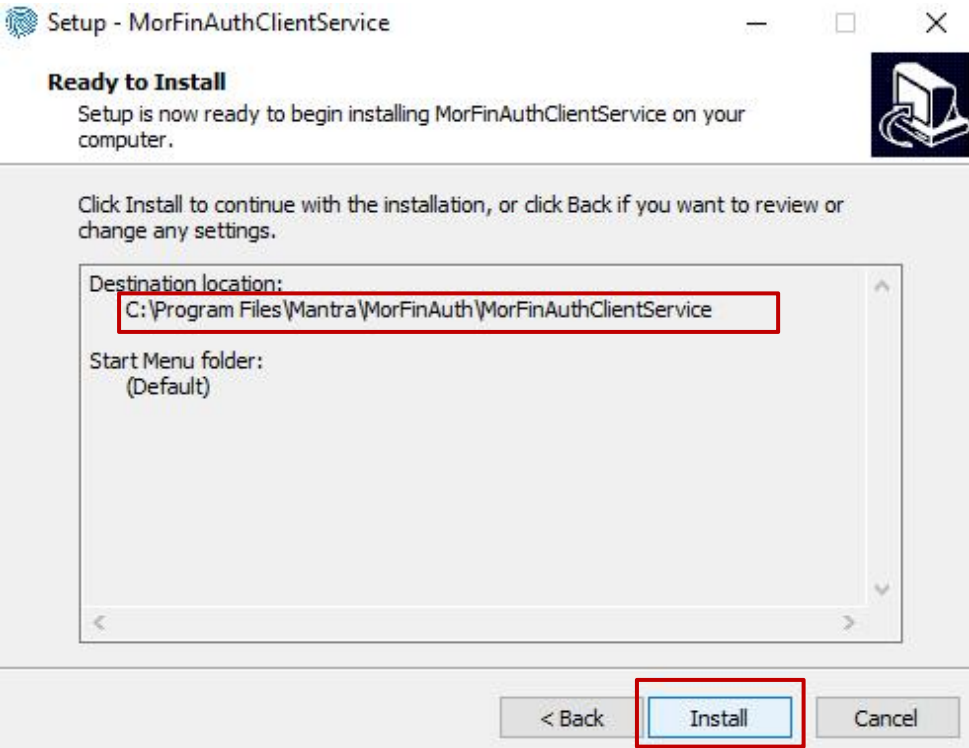


4. FinishMorFinAuth Client Service Installation

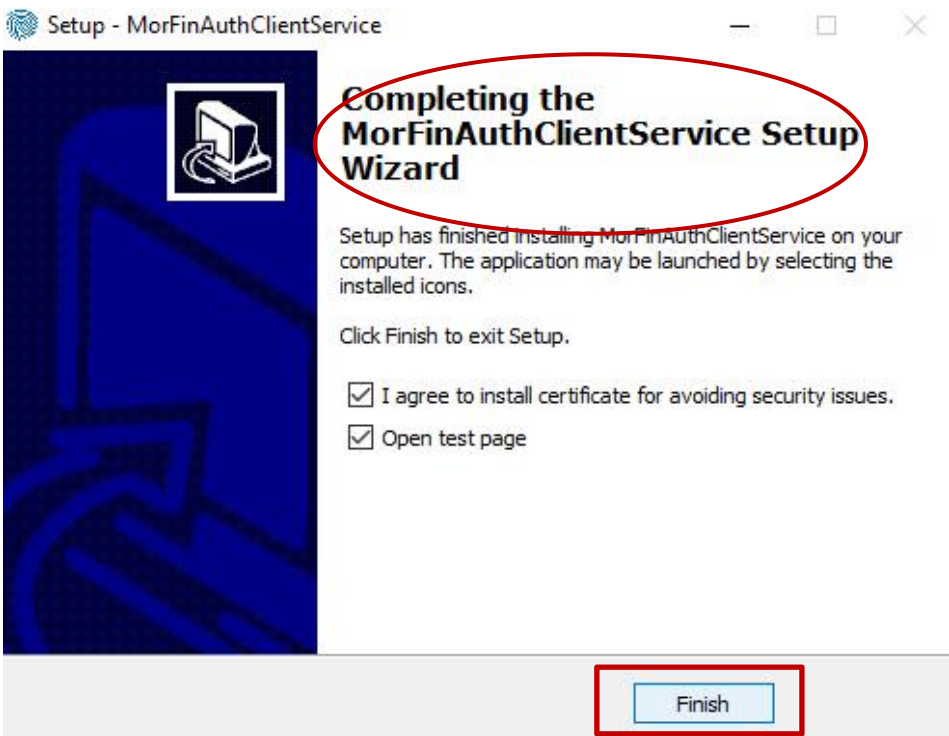

## 5. Service Status

After installing service check status of it through control panel.

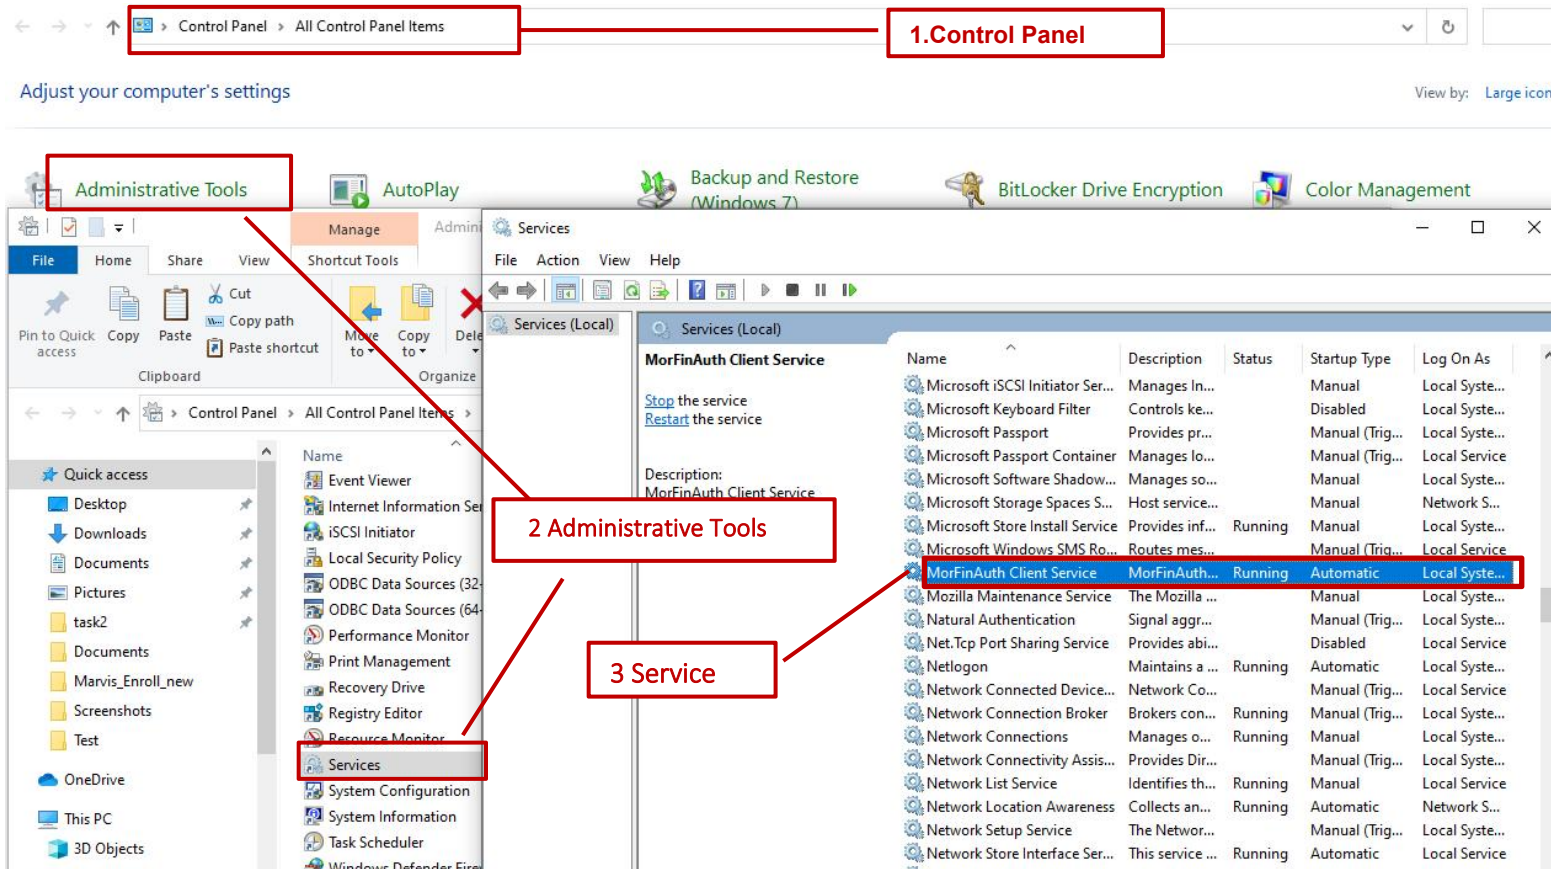


## 6. Opening Certificate Installation Page

Setup will automatically open service URL as below or you can manually browse the URL.

<https://localhost:8030/morfinauth>


Optional: To request on HTTP → Change flag → '**Block insecure private network requests**' on web browser from '**chrome://flags/#block-insecure-private-network-requests**' URL address. → Change flag to **DISABLED** status.

### 6.1 Chrome

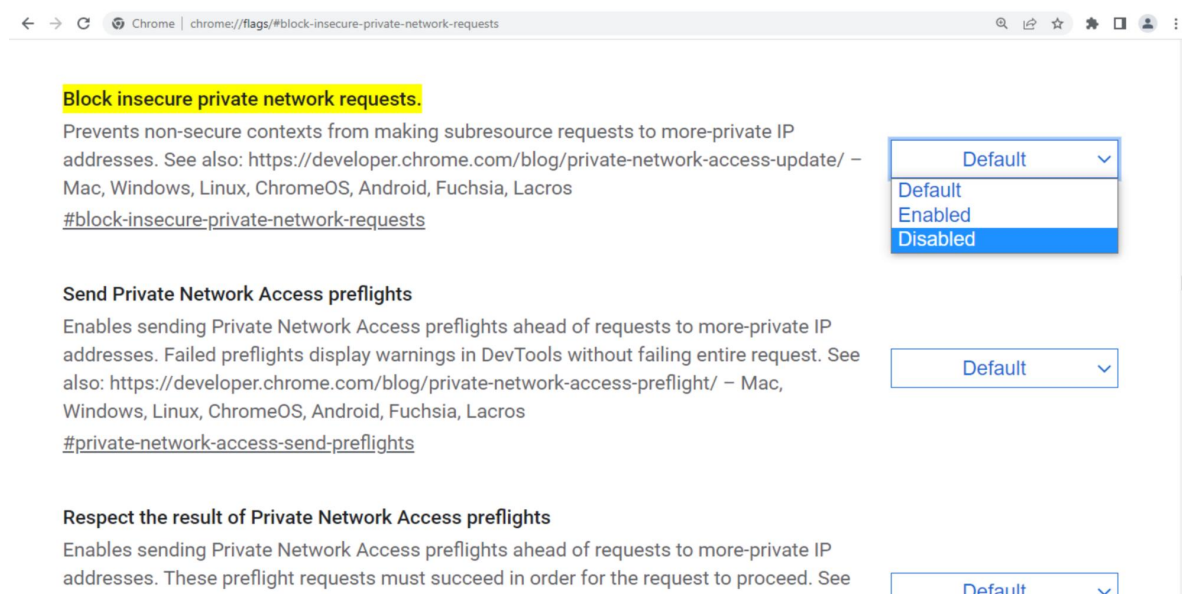

## 6.2 Firefox


Optional: To request on HTTP → Change flag - 'Block insecure private network requests' on web browser from 'about:config' → 'network.websocket.allowInsecureFromHTTPS' URL address. → Change flag to **TRUE** status.

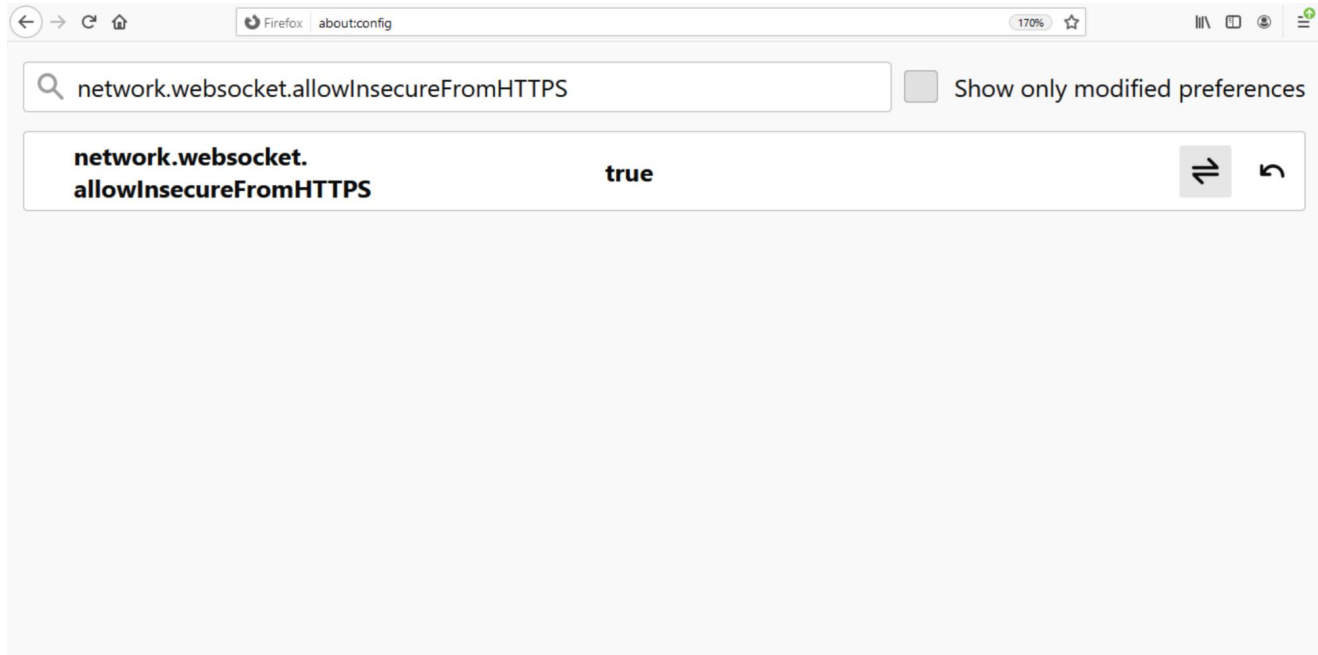

### 6.3 Internet explorer

Opening test page with below link (click or ctrl + click) or follow below image.

<C:\ProgramFiles\Mantra\MorFinAuth\MorFinAuthService\Test\MorFinAuthServiceTest.html>

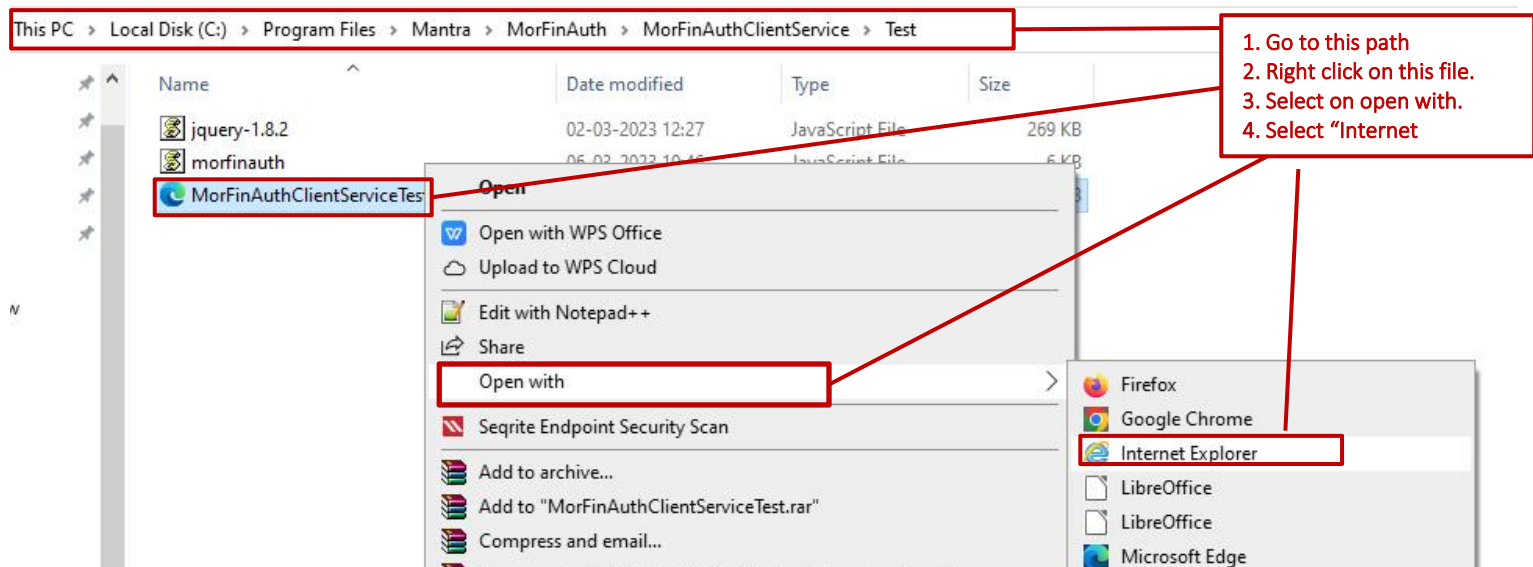

**MANTRA-MorFinAuth-TEST**

Quality(1-100):  Timeout(In Second):

Select Image Type:  Select Template Type:

Select Connected Device:  Enter Client Key:

Enter Template For Matching:

Finger Image:

Serial No:  Make:

Model:  Width:

Height:



Buttons: Get Connected Device, Check Device, Get Supported Device, Get Info, Capture, Get Image, Get Template, Match, Capture and Match, Uninit


Status:




Quality:

Internet Explorer restricted this webpage from running scripts or ActiveX controls. [Allow blocked content](#)


5. Click on allow blocked content

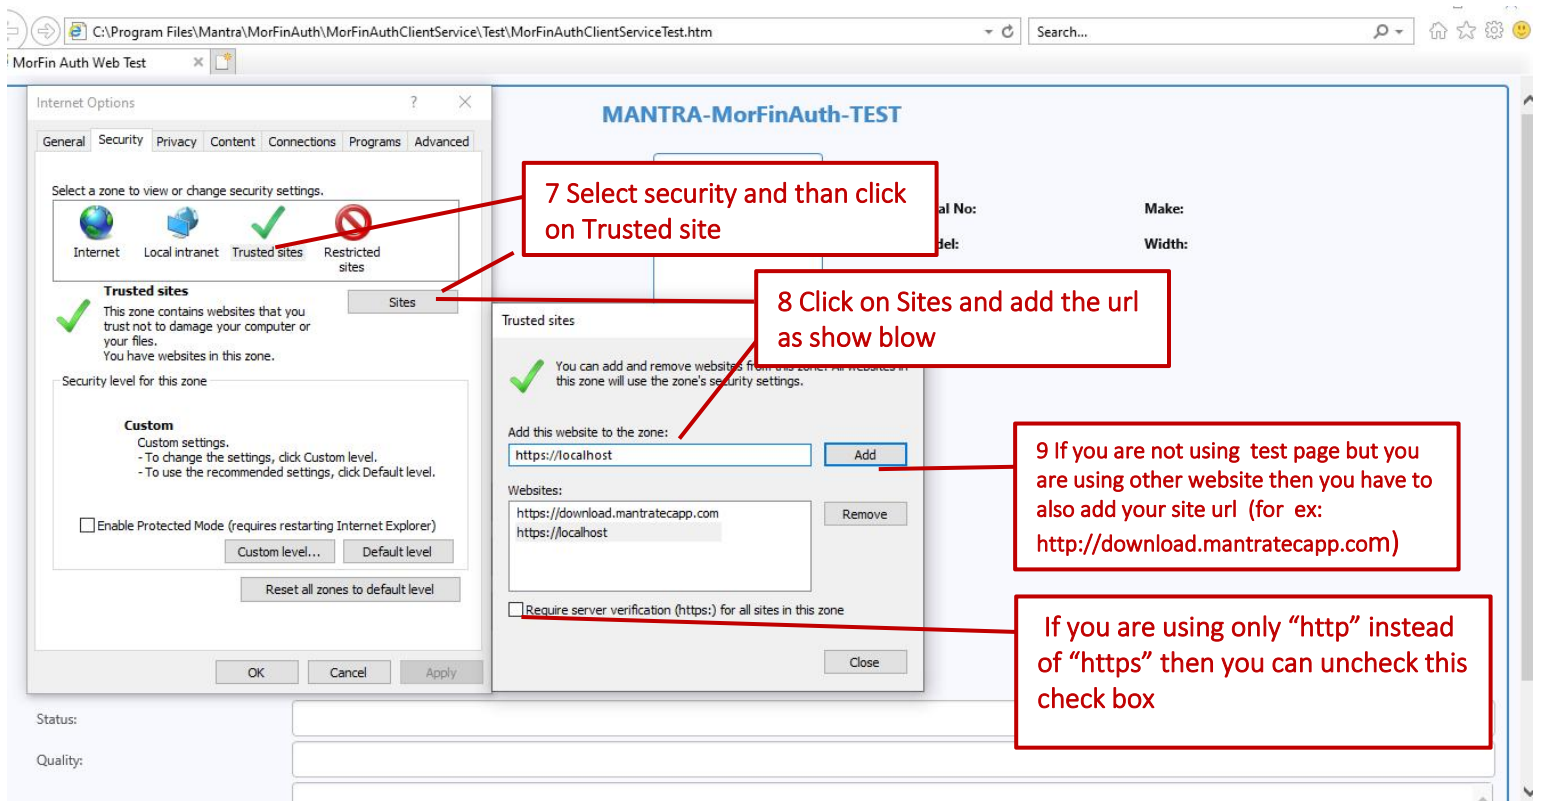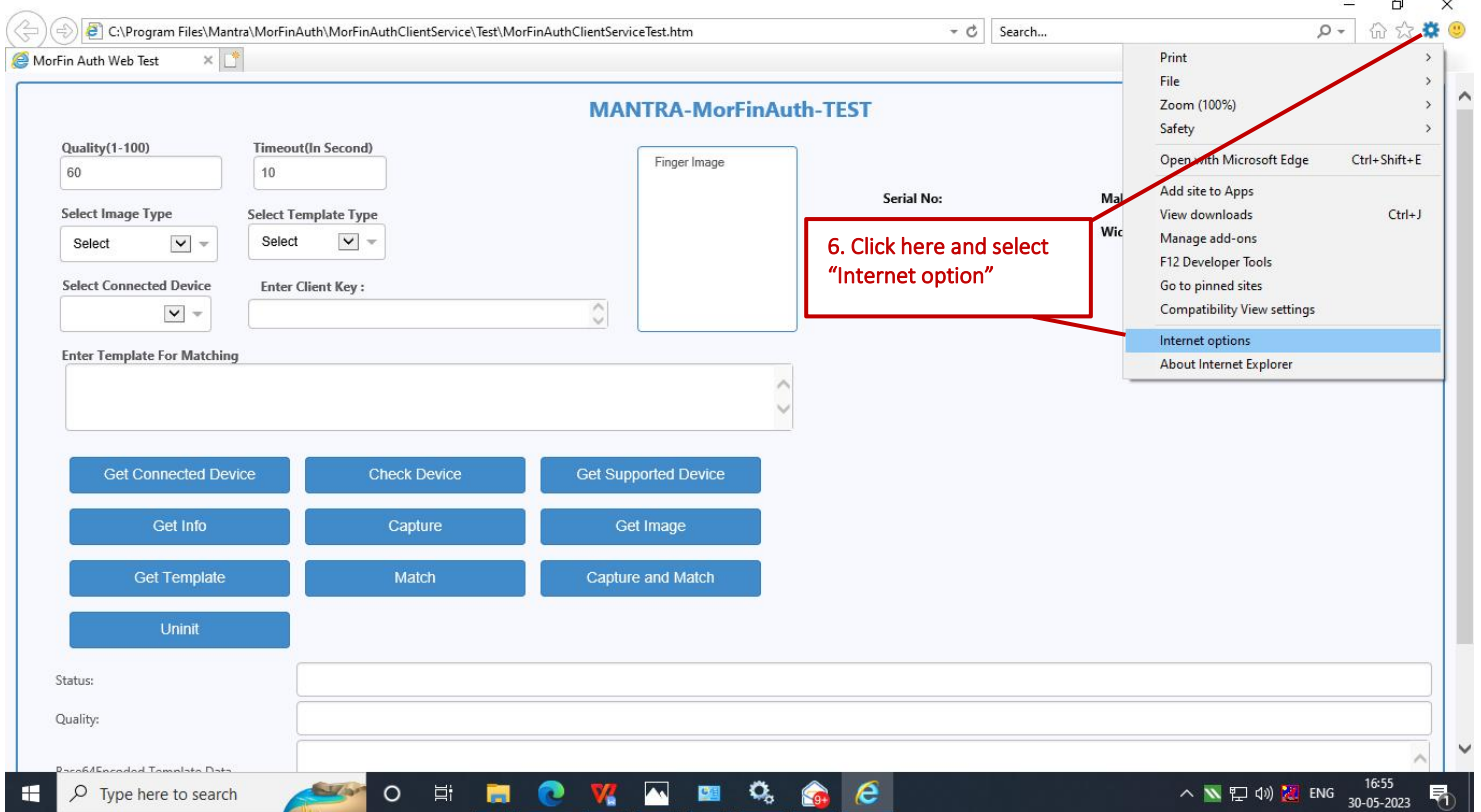

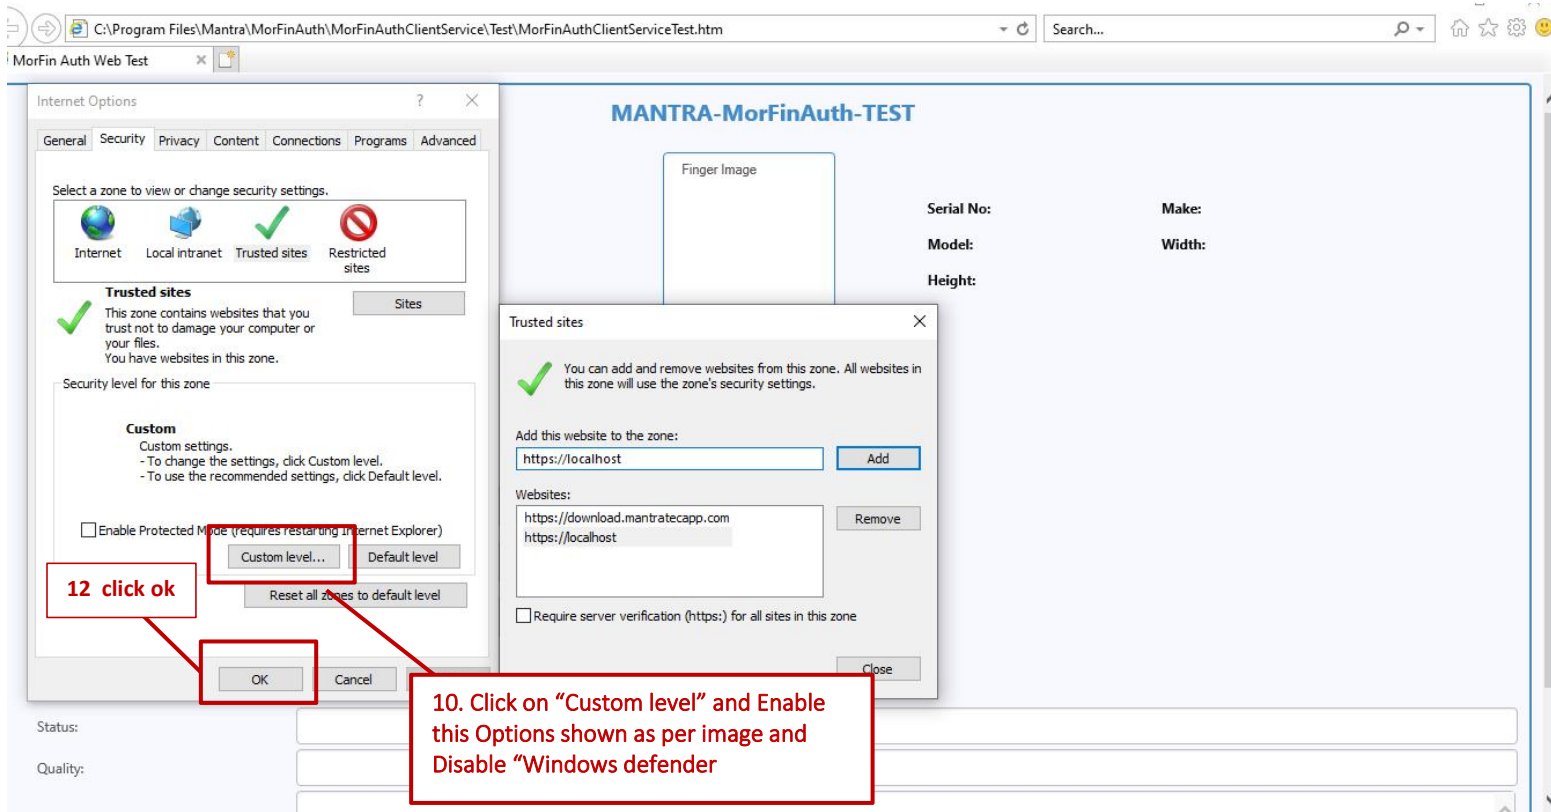

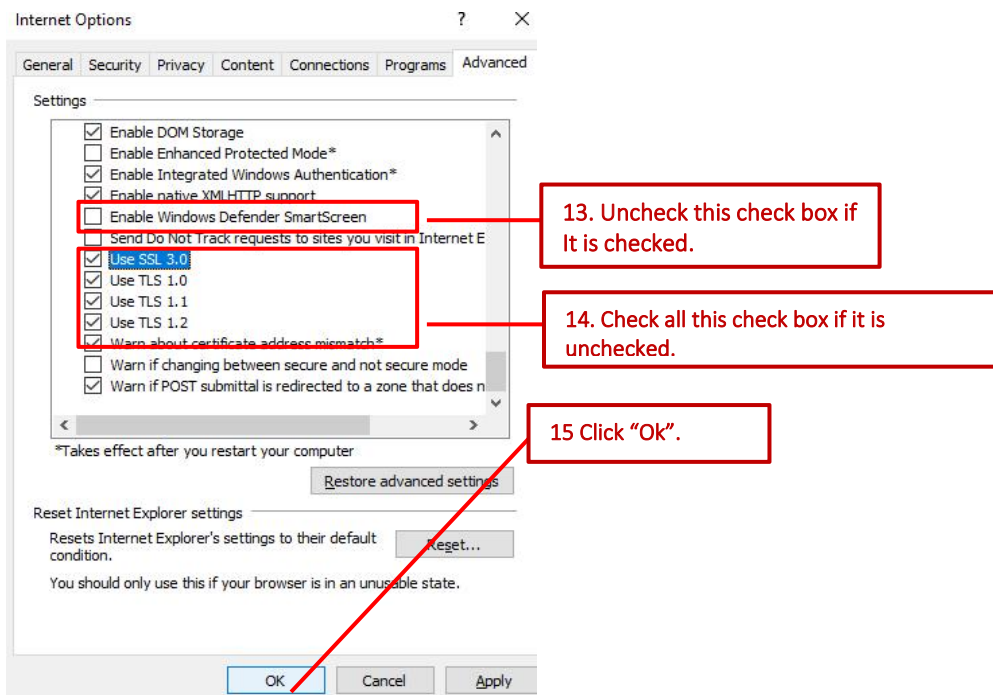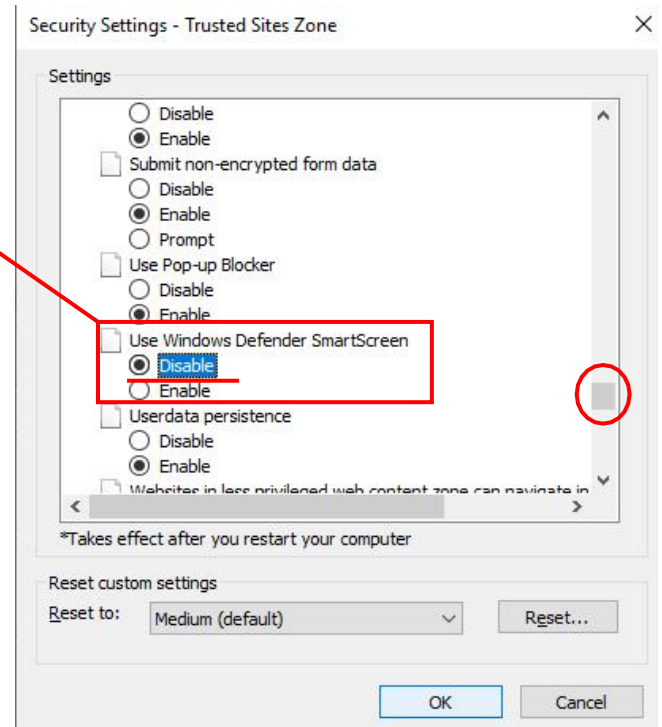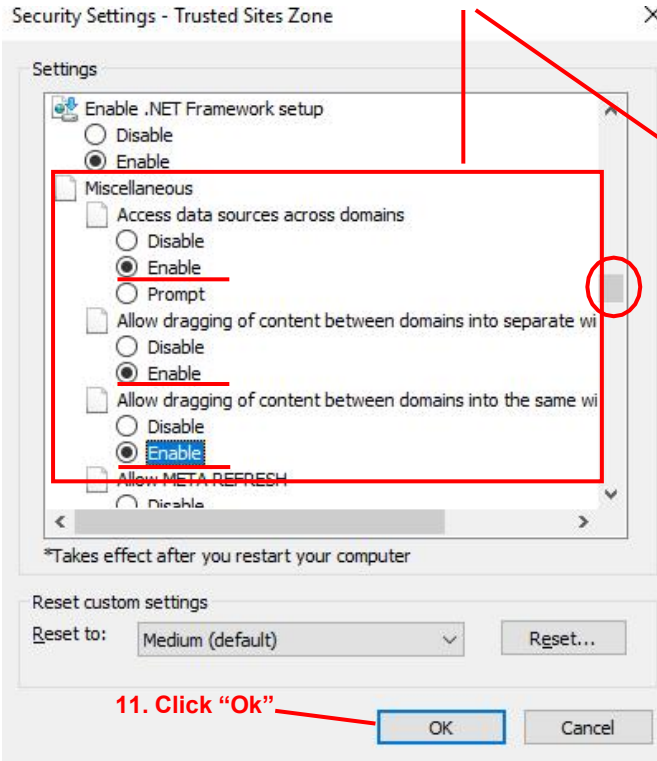

## 7 Morfin Auth Test Page

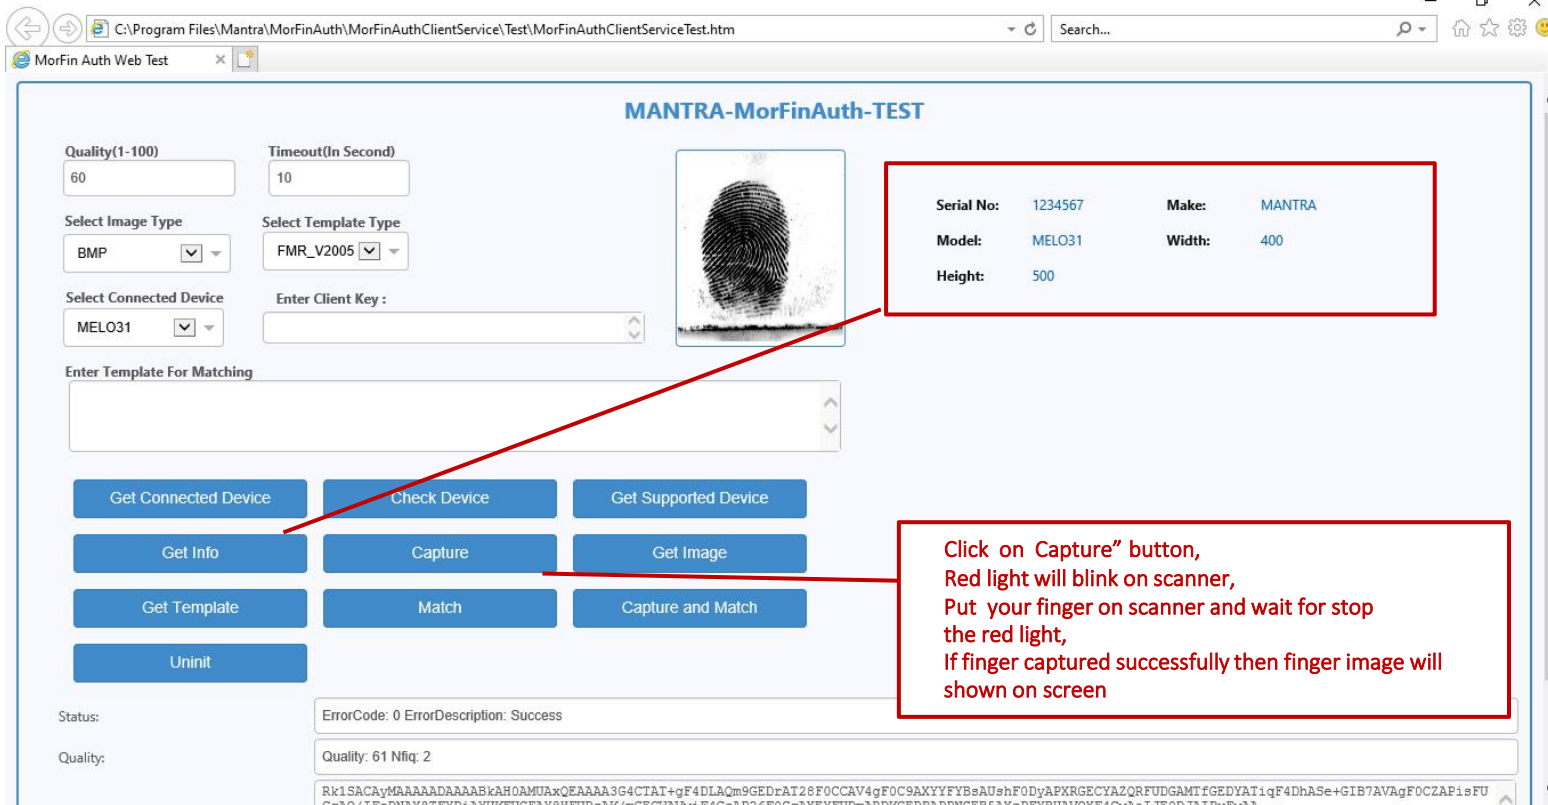

**MANTRA-MorFinAuth-TEST**

Quality(1-100): 60      Timeout(In Second): 10

Select Image Type: BMP      Select Template Type: FMR\_V2005

Select Connected Device: MELO31      Enter Client Key:

Enter Template For Matching:

Buttons: Get Connected Device, Check Device, Get Supported Device, Get Info, Capture, Get Image, Get Template, Match, Capture and Match, Uninit

Device Information (Red Box):

|            |         |        |        |
|------------|---------|--------|--------|
| Serial No: | 1234567 | Make:  | MANTRA |
| Model:     | MELO31  | Width: | 400    |
| Height:    | 500     |        |        |

Click on "Capture" button,  
Red light will blink on scanner,  
Put your finger on scanner and wait for stop  
the red light,  
If finger captured successfully then finger image will  
shown on screen

Status:      ErrorCode: 0 ErrorDescription: Success

Quality: 61 Nfiq: 2

Rk1SACyMAAAADAAAABkAH0AMUAXQEAAA3G4CTAT+gF4DLAQm9GEDrAT28FOCCAV4gFOC9AXYYFYBsaUshF0DyAPXRGECYAZQRFUDGAMTfGEDYAT1qF4DhASe+GIB7AVAgFOCZAP1sFU  
C~3A/T~3DMAY8TEVh:3VtK8TfCFAY8FTm~AZ/~wCFQZMA~4F4CaAD26F0CaY8FVETm~3BDWCFRDA8DNGFR53Y~pFV8TtM/VV54C~3a~T.TF0NTATD~FUA

-X-X-X-X-X-X-X-X-X-X-X-X-X-X-X-